

# P1 Carbon Slider

# Quick Guide



## P1 Included Component



## P1+KMS S2 Included Component



## Easily

## Simple Installation



1 Mount 'Belt Block' beneath the end of the slider.




2 Insert the belt and tighten with two knobs.



3 Mount the belt on the pulley and bearings.



4 Mount the motor on the camera plate of the slider.

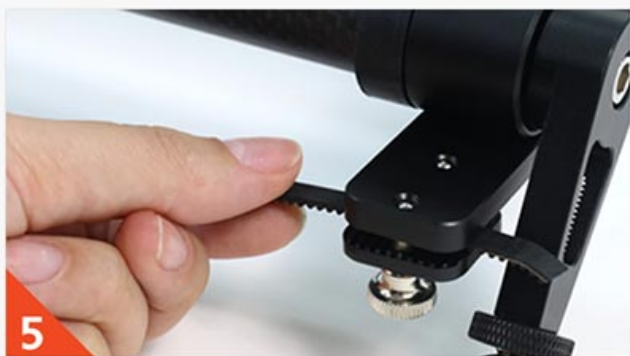


5 Pull the belt tightly and fasten the belt block.



6 Connect the motor and the controller with Lan cable.

## Smart

## Intuitively Upgraded Controller

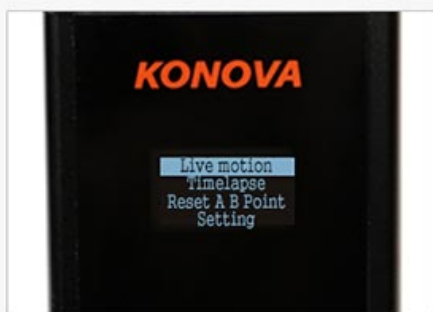

Live motion, Timelapse capability, Reset two points, Acceleration, Deceleration, Duration, Speed Adjustable Language comes with English, Korean and Chinese.

# **KONOVA**

**KONOVA INC.**

[www.konovaphoto.com](http://www.konovaphoto.com)

44-9, Techno 10-ro, Yuseong-gu, Daejeon, South Korea

Tel. +1 213-341-1618, +82 70-7865-2669 · Fax. +82 2-6280-8560

E-mail. [info@konovaphoto.com](mailto:info@konovaphoto.com)

Made in Korea